


# SHOCKER XLS

## ASA/FRAME LEAK GUIDE

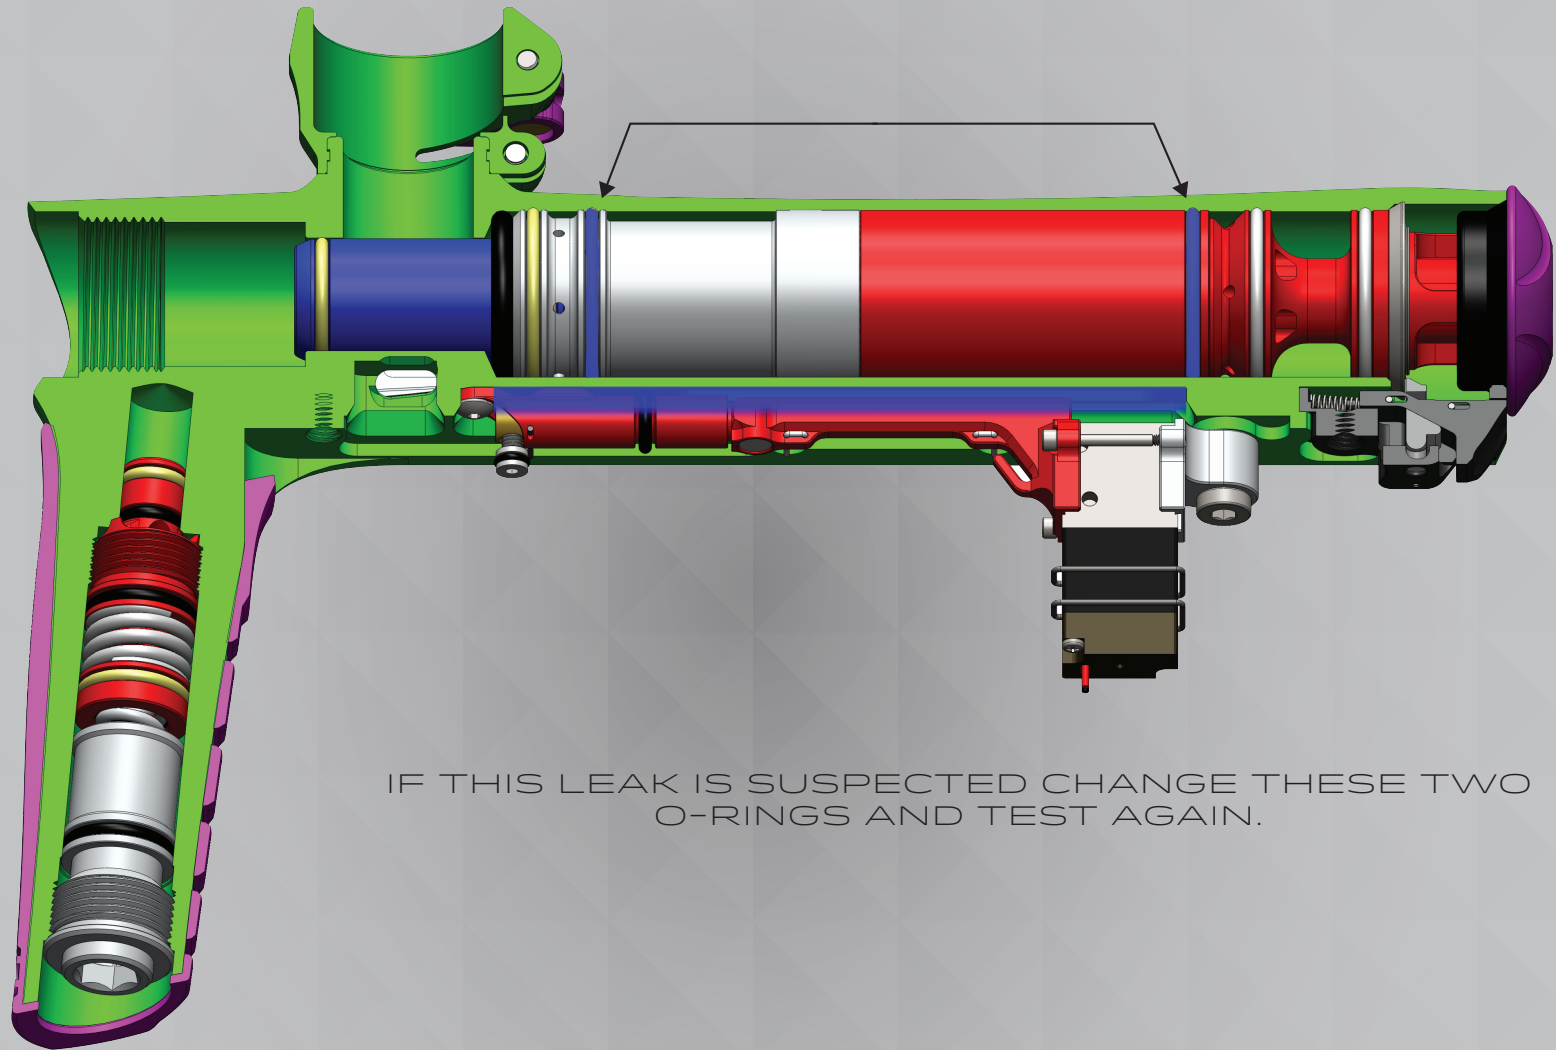


IF THIS LEAK IS SUSPECTED CHANGE THESE TWO O-RINGS AND TEST AGAIN.

**SHOCKER XLS**  
BODY CHANNEL LEAK GUIDE




THIS DIAGRAM ILLUSTRATES THE O-RINGS RESPONSIBLE FOR AIR LEAKING FROM INSIDE THE FACE OF THE BOLT.

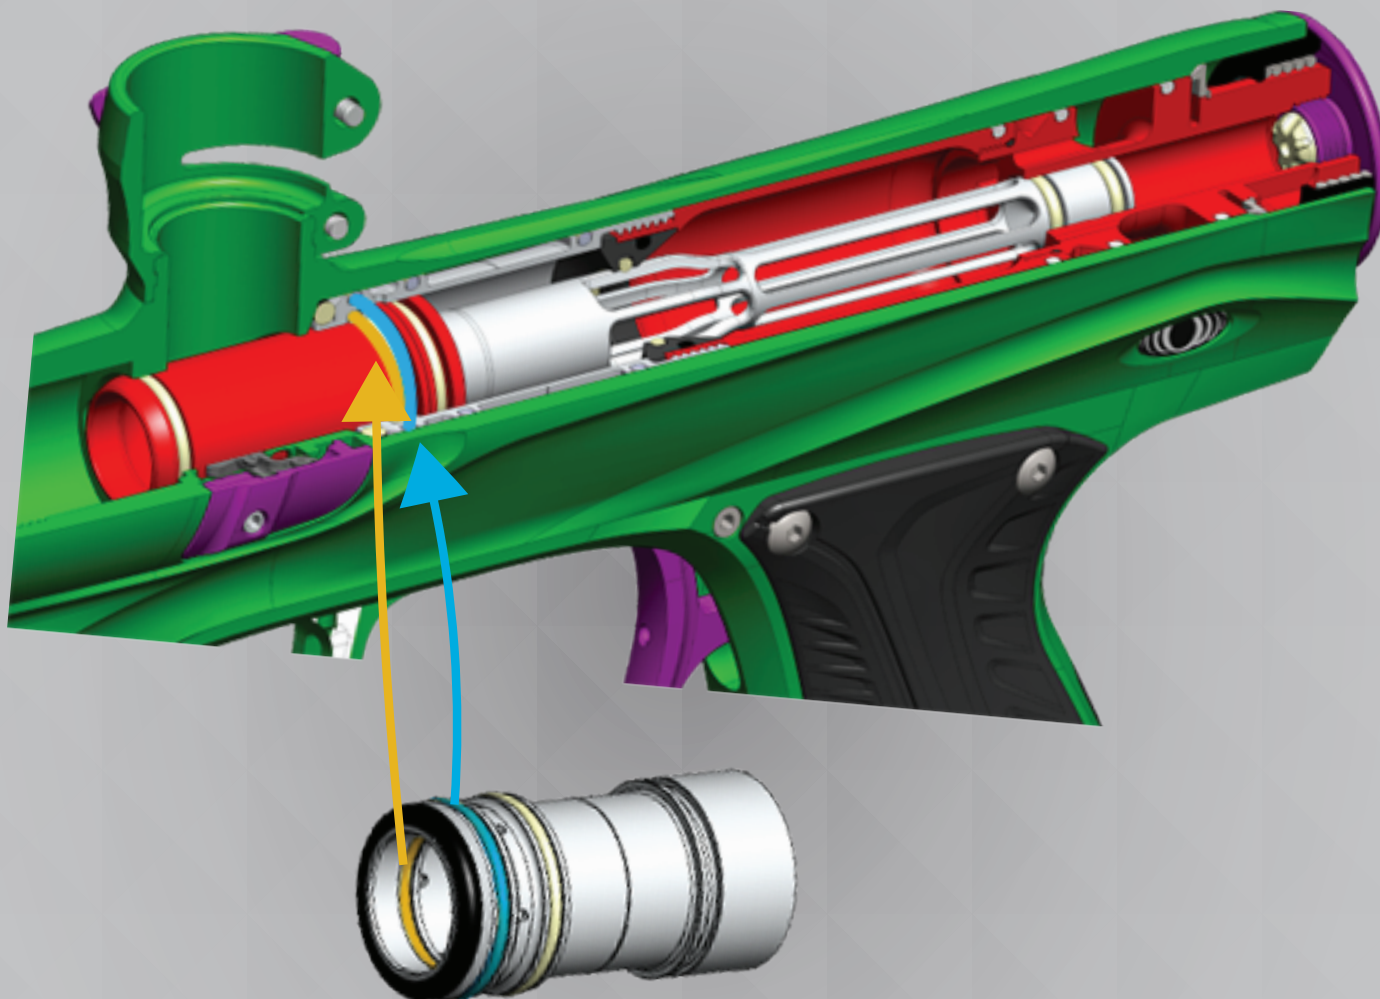

THIS DIAGRAM ILLUSTRATES THE O-RINGS RESPONSIBLE FOR AIR LEAKING AROUND THE OUTSIDE OF THE BOLD FACE.

**SHOCKER XLS**  
DOWN BARREL LEAK GUIDE




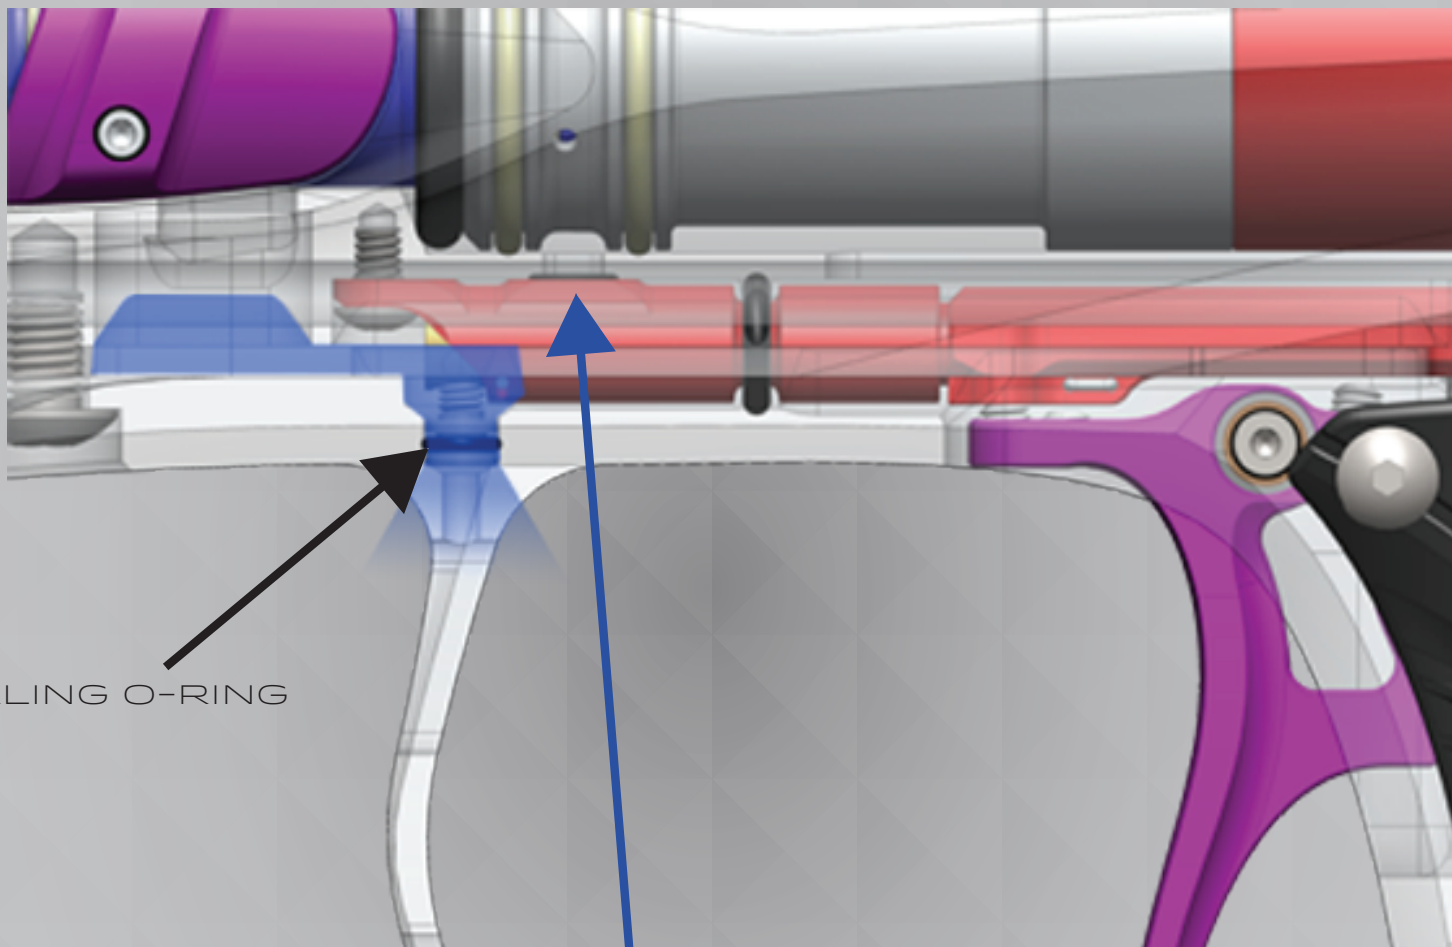

NON SEALING O-RING



**SHOCKER XLS**  
FORWARD FRAME LEAK GUIDE

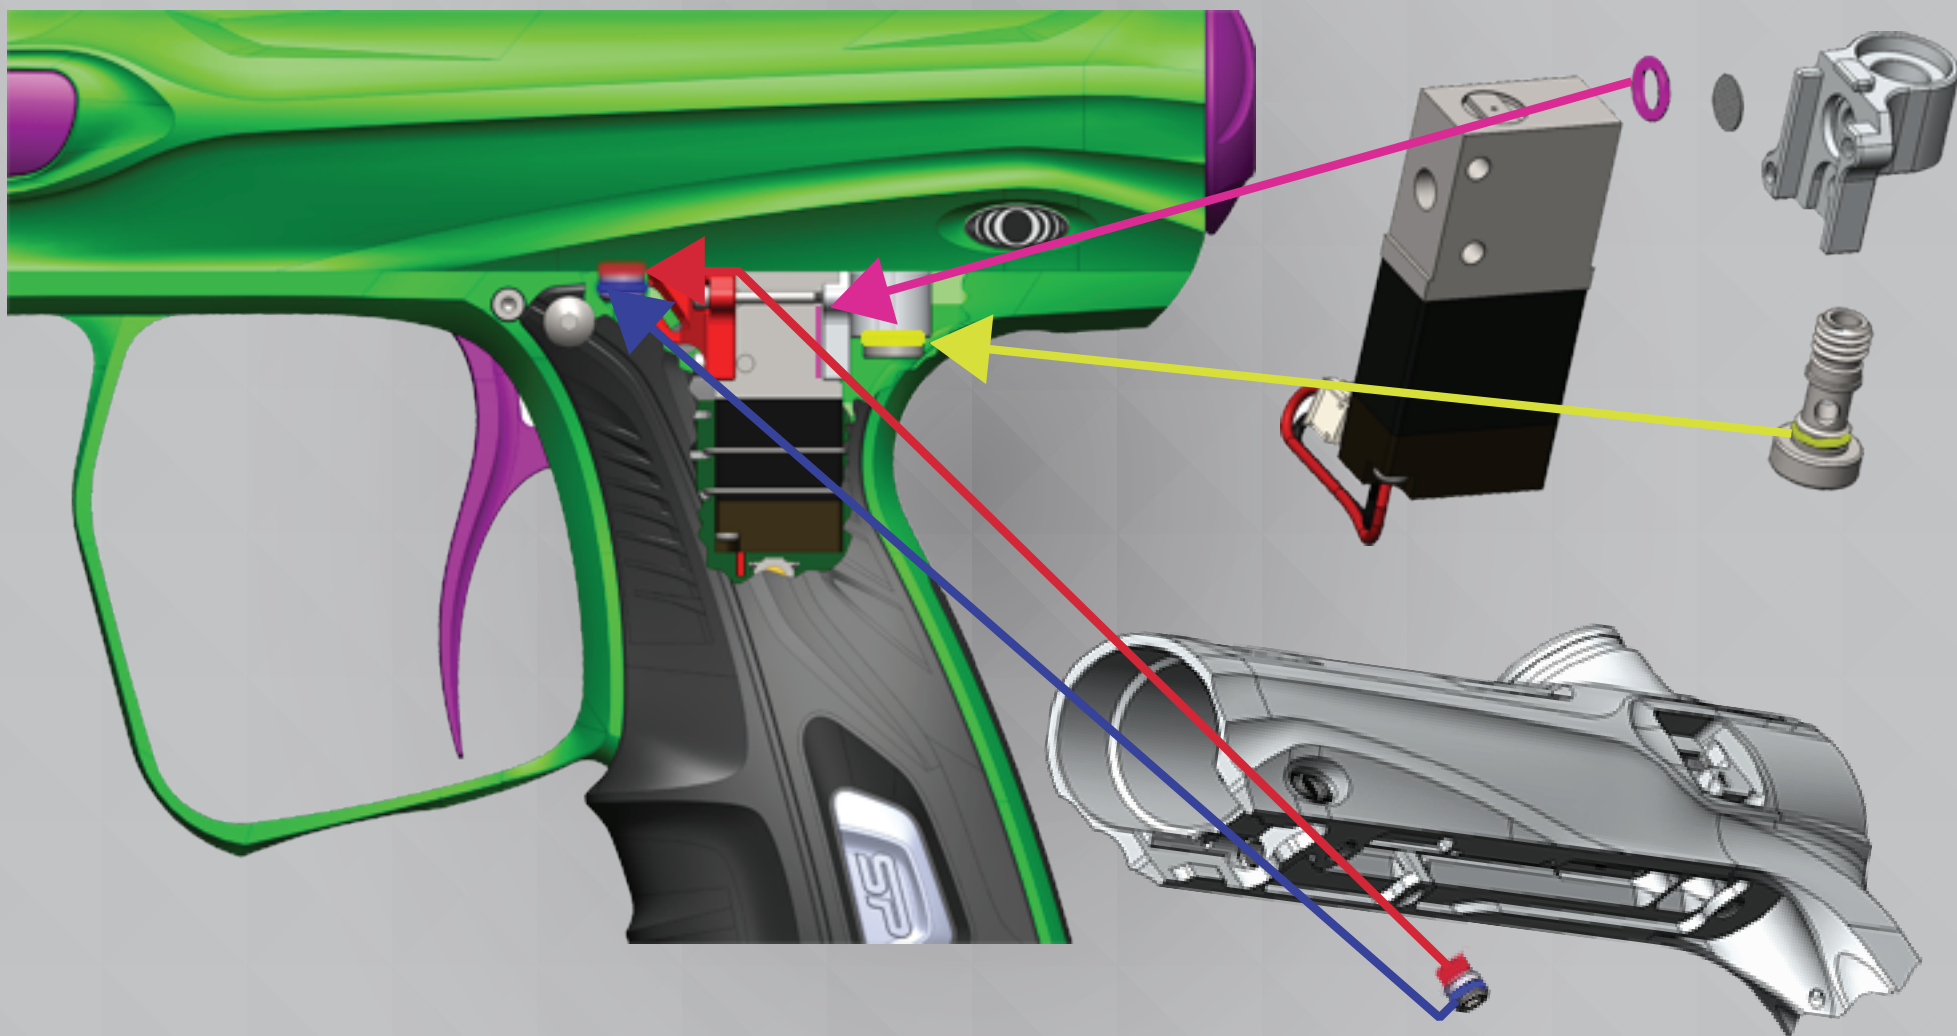

RED AREA SHOULD HAVE RED LOCTITE

**SHOCKER XLS**  
GRIP FRAME AREA LEAK GUIDE

